

ELECTRONIC SCORING SYSTEM **xCursor ET-2000**

RUBBER SHEETS REPLACEMENT

1. Remove the old rubber sheets



2. Mark the location of the hatch



3. Place a frame-sized rubber piece over the frame, straighten (no need to stretch), secure at corners and over a 100 mm board over the hatch, as shown in the illustration.



4. Align the hatch and secure the 100 mm board on both ends with three screws.



5. Turn the frame upside down and secure the rubber to the board over the door so that no wrinkles are left (you don't have to stretch yet)



6. Turn the frame over and tighten the rubber (about 30-50 mm) and fix provisionally at the corners



7. Now tighten the rubber and secure it provisionally to the side.



8. Clean the rubber edge with a solvent or alcohol



9. Apply air conditioning tape as shown in the illustration.



10. Fix the rubber to the frame.




11. Remove the provisional clips from the side of the frame



12. Using a sharp knife, remove excess rubber



13. Now that the front is done, you can flip the frame over and check that there are no wrinkles.

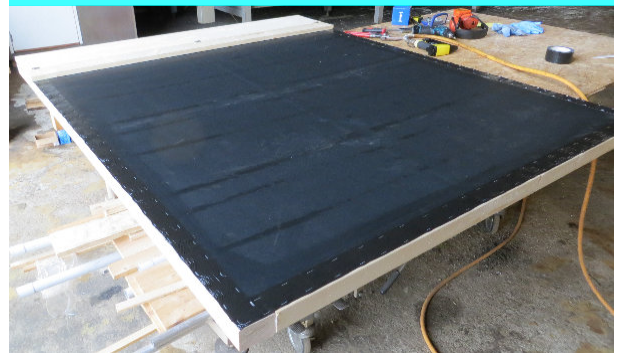

14. Now do the back side in the same way

